



USER MANUAL

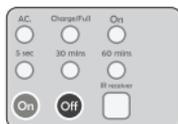

Self-Contained Emergency Light | CU - IP66 Series

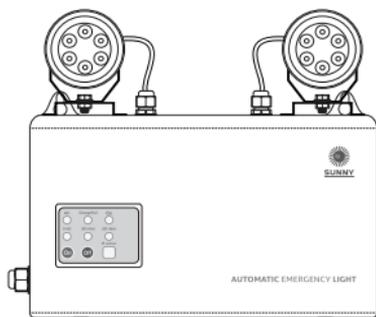

- LED AC:** ▶ Indicate that the unit is receiving power.
- LED Charge/Full:** ▶ Indicate information on battery charging.
- LED On:** ▶ Indicate the unit is ready for operation.
- LED 5 sec:** ▶ Indicate the unit is performing a 5 second test.
- LED 30 mins:** ▶ Indicate the unit is performing a 30-minute test.
- LED 60 mins:** ▶ Indicate the unit is performing a 60-minute test.
- Switch On:** ▶ Press to turn on the lamp (while the unit is not plugged in).
- Switch Off:** ▶ Press to turn off the lamp (while the unit is not plugged in).
- IR receiver:** ▶ Infrared signal sensor used to receive signal from the Infrared remote.

Note: All 3 LEDs flash 5sec, 30mins, 60mins at the same time.
Displays the battery failure alarm situation.



Status Indicators and Testing Buttons

Remote Testing

Features

1. The hosing is made from Grade 304 stainless steel protected against jets of water and dust tight certified by Electrical and Electronics Institute for IP 66 standard.
2. Controlled by a highly intelligent 8-bit micro controller.
3. Automatically self-test every 30 days and discharges the battery for 30 minutes to help extend the life of the battery.
4. Testing can be activated remotely using the infrared remote.
5. Using high quality LEDs with a lifetime of over 50,000 hours, providing bright and constant illumination throughout its operation.
6. The battery monitoring circuit will give an audible warning when the battery's charge is about to be depleted, giving the user time to recharge it before draining completely. This will help to extend the life of the battery.

Installation and Operation

1. Install the unit on the wall by using the screws on the ear to fix the unit firmly to prevent dropping that will cause accidents to the user or the product.
2. Open the front cover of the unit to turn on the device by releasing both locking clips and opening the front cover.
3. Press the ON switch (hold about 3 seconds) to turn on the device, both emergency lamps will illuminate.
4. Notice the LED will show the status as follows.
 - 4.1 "LED ON" indicates that the unit is working.
5. Close the front cover and lock the front cover with both locking clips. (Before closing the front cover, keep the power cable inside the unit in order to prevent the power cable from pressing on the rubber seal or causing the front cover to not lock tightly, which may cause water and dust to enter the unit.)
6. Plug the unit into a power socket with a 230VAC power supply. The unit will remain on for about 5 seconds before turning off.
7. The LED AC will turn on indicating that the unit is receiving power. The LED Charge/Full will be on when the battery is charging and will turn off when the battery is fully charged.
8. When the unit is operational, tests can be performed using the Test button on the unit or remotely using the remote with the following options.
 - Press the 5 sec button to perform a 5 second test, after which the unit will return to normal operation.
 - Press the 30 mins button to perform a 30-minute test, after which the unit will return to normal operation.
 - Press the 60 mins button to perform a 60-minute test, after which the unit will return to normal operation.
 - To cancel the test, press the OFF button.
9. An audible warning will sound from the battery checker in the following scenarios.
 - The unit has been stored for a long time causing the battery's charge to fall extremely low.
 - The emergency light has drained the battery until it is almost completely exhausted.


Important Note on Using the Unit

1. Always press the "ON" switch every time after installation to turn on the unit.
2. When the unit is not in use always turn it off by pressing the "OFF" switch.
3. The unit should be stored in temperatures under 25 Degree Celsius and the battery should be charged every 3 months to maintain its operational life.
4. Every time the front cover of the machine is opened for any purpose. When finished, the power cable should be stored before closing the front cover and the locking clip must be securely locked on the front cover to prevent water and dust.


Initial Trouble Shooting

Problem	Cause	What to do
- Power not getting to the unit after plugging in. The LED AC light does not turn on.	- The power socket might not have any power. - The plug or socket is loose. - The AC.230V fuse is blown.	- Check the 230VAC power supply. - Check the plug and socket. - Contact customer service.
- Emergency light does not turn on after the power went out.	- The unit is not plugged in. - The lamp holder or connector is loose. - The lamp is faulty. - The DC fuse is blown.	- Check that the unit is plugged in. - Check whether the lamp holders and connectors are properly attached. - Contact customer service. - Contact customer service.
- Emergency light only turns on for a short time after the power went out.	- The battery is not fully charged. - The battery has degraded.	- Fully charge the battery. - Contact customer service to replace the battery
- There is dust or water inside the device.	- Locking clip is not tight. - The rubber seal is not completely closed or there is a cable over it.	- Check the lock clip by locking it firmly. - Check the rubber seal if there is a cable over it or not, keep the cable inside the unit neatly.


Dimension (mm)

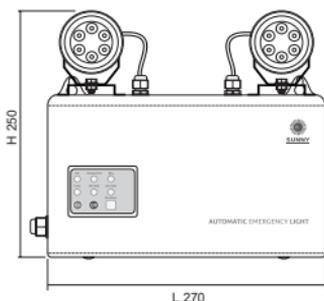

FRONT VIEW

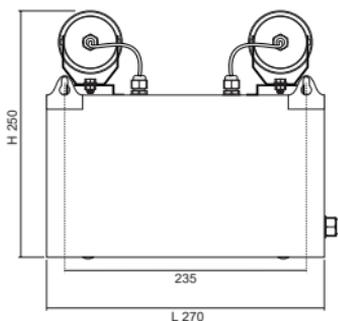

BACK VIEW

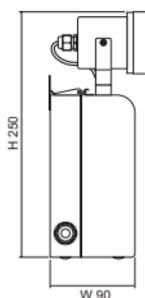

SIDE VIEW

How to use the remote



-  ▶ Perform a 5 second test.
-  ▶ Perform a 30 minute test.
-  ▶ Perform a 60 minute test.
-  ▶ Increase the lamp's brightness (only available with the HZ lamp type)
-  ▶ Decrease the lamp's brightness (only available with the HZ lamp type)
-  ▶ Turn on/off the emergency lamp or cancel any test in progress.

Terms for Warranty and Service

1. The product will only be under warranty if the customer fills in the “warranty card” and return the “return part” to the company within 7 days of purchasing the product. If this is not done within the specified time then the warranty will be considered void.
2. The warranty only covers the unit’s internal parts for the duration specified by the company counting from the date of purchase.
3. Please show the warranty card every time when contacting our service department or the dealer you purchased the unit from.
4. The warranty will be considered void in the following cases.
 - The unit has been used outside of its intended use specified in the manual.
 - The unit has been used with equipment that does not meet the specifications specified within the manual.
 - The unit has been damaged from impact, for example parts are dented, scratched missing or distorted.
 - The unit has been modified or repaired by people not officially certified by our company.
 - The Sticker Warranty Void has been removed or torn.
 - The unit is damaged from negligence or incompetent use, for example, the battery is swollen, the batter has been overcharged, the battery has been damaged from quick charging, the battery has been short-circuited, the battery’s charged has been completely drained.
 - The unit has been stored improperly, for example, it was exposed to moisture causing rust and damage to the internal circuitry.
 - Damaged was caused by a malfunction in the AC power supply.
 - Damage from natural disaster such as fire, moisture, submersion in liquids, chemical damage or from unavoidable circumstances.
 - Damage from animals or insects.

Note : Please read the manual carefully before installation and operation to understand how to properly operate the unit.

For any further questions about your product please feel free to contact SUNNY’s customer service department.
Tel. (+66) 02-948-4450-2
E-mail: service@sunnyemergencylight.com

IsOn Import-Export Co., Ltd.

2915-2917 Ladprao Road, Klongjan,
Bangkapi, Bangkok 10240

